# Accelero L2 Pro

Installation Manual

For further information, please consult www.arctic.ac

DE Deutsches Handbuch online verfügbar.
FR Le manuel en français est disponible en ligne.
ES Manual en español disponible en línea
PT Manual em Português disponível online.
SE Svensk manual tillgänglig online.
CZ Návod v češtině dostupný online.
HU A magyar kézikönyv az interneten is elérhető.
PL Polski podręcznik dostępny na stronie internetowej
NL Nederlandstalige handleiding is online beschikbaar.

## Accessories

Spacer X 4

Screw X 4

Adhesive tape X 4

RAM heatsink X 8

VR heatsink X 8

## Preparation to install voltage regulator and RAM heatsinks

Clean the GPU cautiously. Memory and voltage regulator chips need to be rubbed additionally with an eraser.
**Not using an eraser leads to no adhasiveness of the thermal tape at all.**

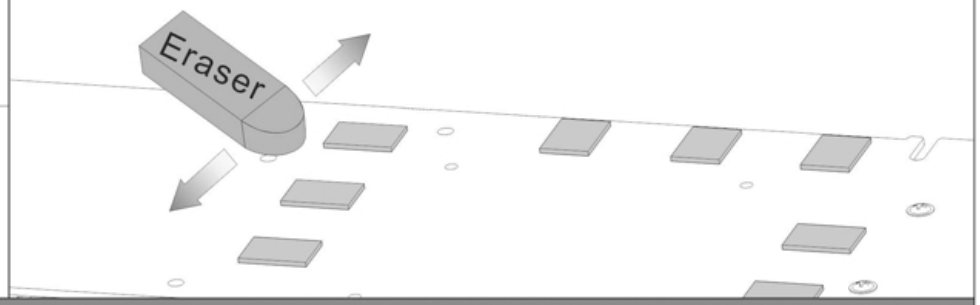


## Installation of voltage regulator and RAM heatsinks

1

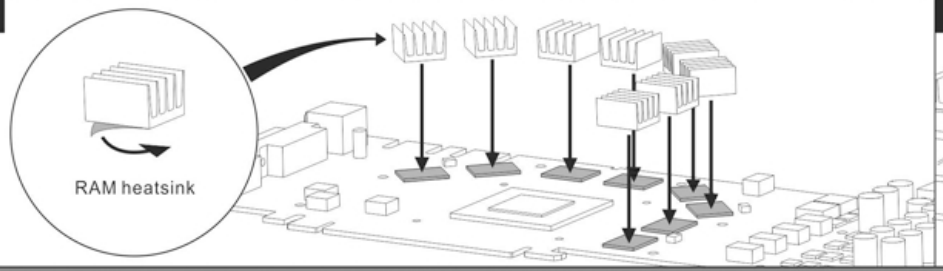


2

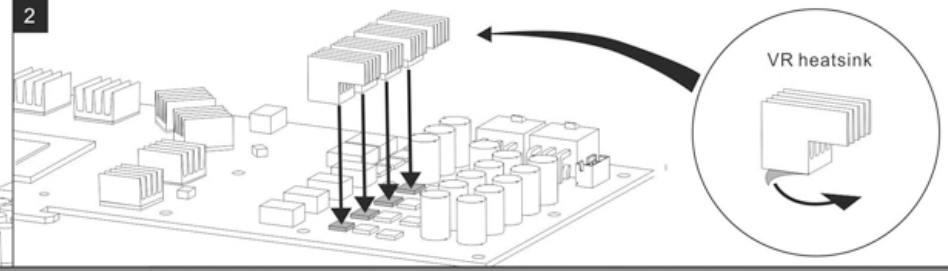


## Preparation to install Accelero L2 Pro

1 **Step 1:**
The flexible mounting plate of Accelero L2 Pro is designed for fitting different GPU locations. Please measure the vertical distance between the center of the GPU and the bottom of the edge of the card.
The default mounting plate is for distance between **42.5mm** to **48.5mm**. If your card measurement is within this range, please skip Step 2 and go to “Installation of Accelero L2 Pro”.

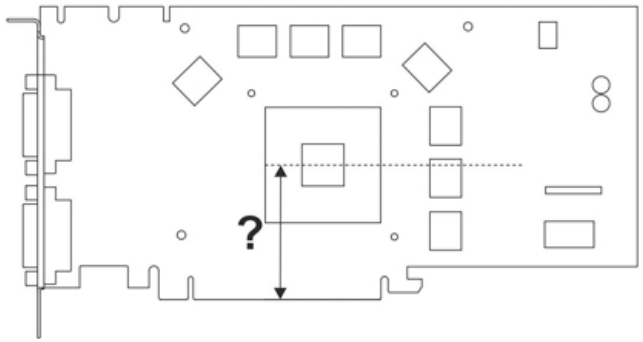


2 **Step 2:**
If the distance between your GPU and the bottom of the card is longer than **48.5mm**, please use screw hole A.
If the distance between your GPU and the bottom of the card is shorter than **42.5mm**, please use screw hole C.
Fasten the mounting plates afterwards.

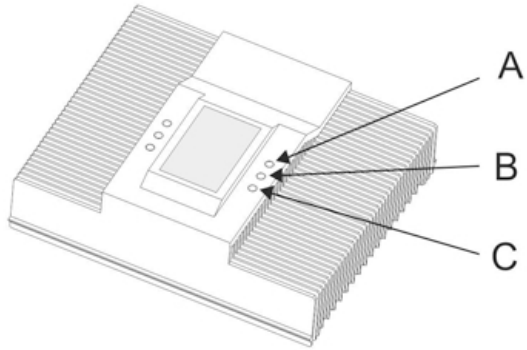

## Installation of Accelero L2 Pro

1

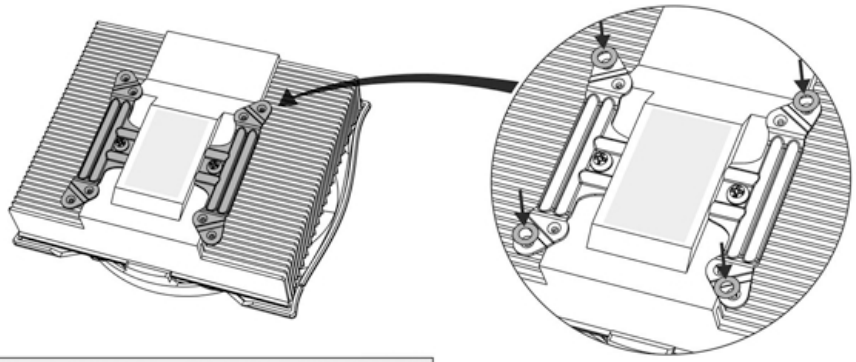

**Never touch the pre-applied thermal paste.

**Depending on which screw hole you are using.

2

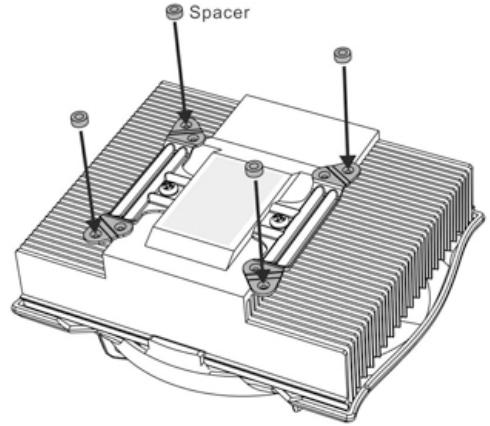


3

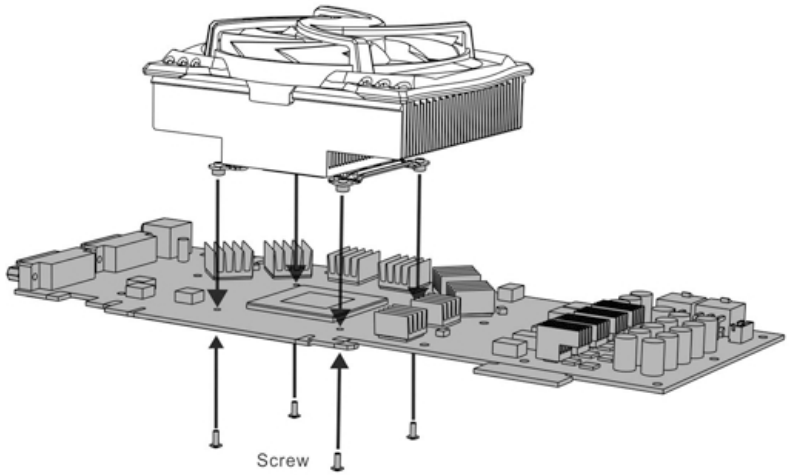


4

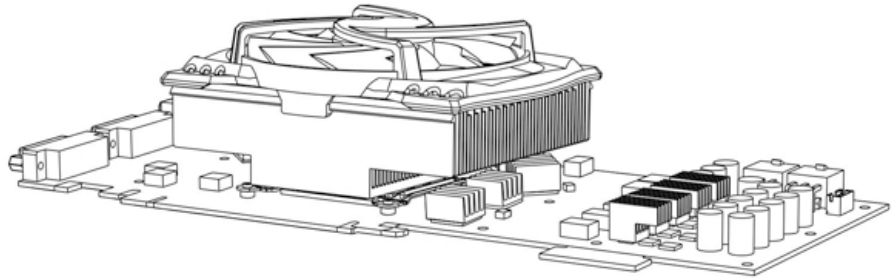

**Limits of Warranty**

Warranty coverage does not include the following:

- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components

**Thermal Compound**

The thermal compound is already pre-applied to the heatsink. If the cooler has to be installed a second time, we highly recommend using the ARCTIC MX-2 or the ARCTC MX-4 from ARCTIC. Only our compound guarantees optimal performance in combination with the surface of our heatsinks.

**ARCTIC Switzerland**
Huobstrasse 4
8808, Pfäffikon, Switzerland
www.arctic.ac

**Copyright©**
**2010 ARCTIC Switzerland. All Rights Reserved.**
No part of this manual including the products described in it, may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ARCTIC Switzerland. In no event shall ARCTIC its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.